



### 327883 VARIFUEL

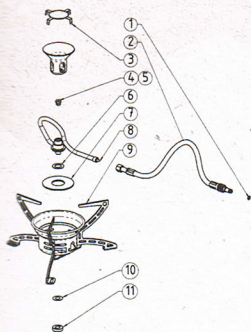


- 1: 730650 O-ring (for old fuel pump)
- 732930 O-ring (for ErgoPump)
- 2: 721860 Hose (for old fuel pump)
- 732490 Hose (for ErgoPump)
- 3: 730680 Flame spreader
- 4: 730670 Jet nipple 0.28 mm
- 5: 730660 Jet nipple 0.35 mm
- 6: 730640 Gasket
- 7: 721450 Priming pad
- 8: 730610 Cleaning wire
- 9: 732220 Stove body
- 10: 730630 Washer
- 11: 730620 Brass nut
- 731860 Multi tool
- 731910 Cleaning needle
- 721290 Service & maintenance kit

### 328883/84 MULTIFUEL

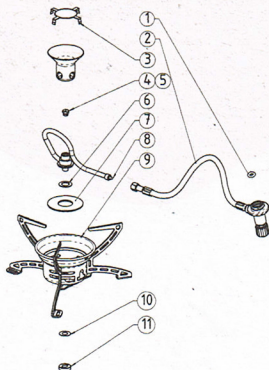


- 1: 732440 O-ring
- 2: 721360 Hose incl. valve
- 3: 730680 Flame spreader
- 4: 730670 Jet nipple 0.28 mm
- 5: 730660 Jet nipple 0.35 mm
- 6: 730640 Gasket
- 7: 721450 Priming pad
- 8: 730610 Cleaning wire
- 9: 732220 Stove body
- 10: 730630 Washer
- 11: 730620 Brass nut
- 731860 Multi tool
- 731910 Cleaning needle
- 721290 Service & maintenance kit

### 328894 MULTIFUEL EX (2007-2010)

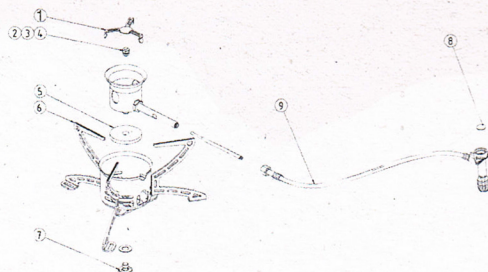


- 1: 731870 Flame spreader
- 2: 730670 Jet nipple 0.28 mm
- 3: 731800 Jet nipple 0.37 mm
- 4: 731790 Jet nipple 0.45 mm
- 5: 731780 Priming pad
- 6: 733940 Stove body
- 7: 731940 Brass screw
- 732440 O-ring
- 721360 Hose incl. valve
- 731860 Multi tool
- 733930 Multi tool
- 731910 Cleaning needle
- 731770 Service & maintenance kit
- 734960 Pump connection part for 732230 & 732231

### 328984 OMNIFUEL

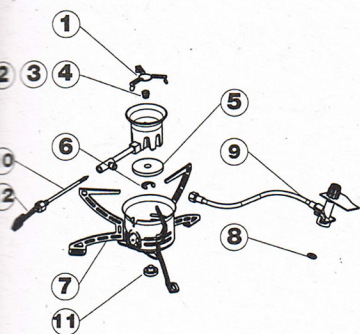


- 1: 731870 - Flame spreader
- 2: 730670 - Jet nipple 0.28 mm
- 3: 731800 - Jet nipple 0.37 mm
- 4: 731790 - Jet nipple 0.45 mm
- 5: 731780 - Priming pad
- 6: 731880 - Holder for priming pad
- 7: 733940 - Stove body
- 8: 732440 - O-ring
- 9: 731930 - Hose incl. valve
- 10: 731900 - Spindle incl. o-ring
- 11: 731940 - Brass screw
- 12: 731920 - Thread handle
- 731860 - Multi tool
- 731910 - Cleaning needle

### 328894 MULTIFUEL EX

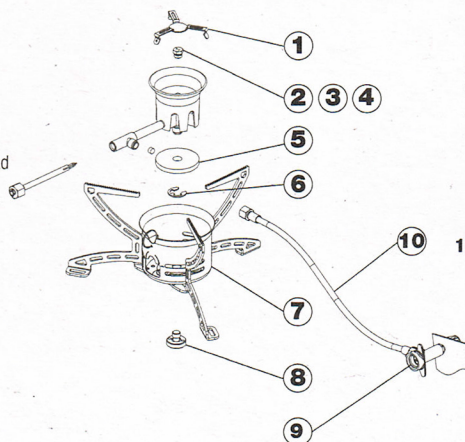

- 1: 731870 - Flame spreader
- 2: 730670 - Jet nipple 0.28 mm
- 3: 737230 - Jet nipple 0.32 mm
- 4: 731800 - Jet nipple 0.37 mm
- 5: 731780 - Priming pad
- 6: 731880 - Holder for priming pad
- 7: 733940 - Stove body
- 8: 731940 - Brass screw
- 9: 732440 - O-ring
- 10: 731930 - Hose incl. valve
- 731860 - Multi tool
- 731910 - Cleaning needle

### 721260 FUEL PUMP (FÖR MULTIFUEL & OMNIFUEL)

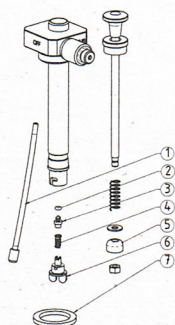

- 1: 721990 Suction pipe
- 2: 730740 O-ring for non-return valve (mod. 1999-)
- 3: 730730 Brass cone for non-return valve (mod. 1999-)
- 4: 730750 Spring for non-return valve (mod. 1999-)
- 5: 730690 Leather gasket
- 6: 730760 Top for non-return valve (mod. 1999-)
- 7: 730700 Gasket
- 730710 Leather grease
- 731660 Non-return valve (mod. 1998)
- 721460 Fuel pump maintenance kit

### 721550 FUEL PUMP (FÖR VARIFUEL)

